


ARCHITECTURAL ACCENTS, INC.
ARCHITECTURAL WOOD PRODUCTS

9760 INDIANA PARKWAY

MUNSTER, IN 46321

(219) 922-9333 SHOP & OFFICE (219) 922-9350 FAX

TEMPLATE INSTRUCTIONS

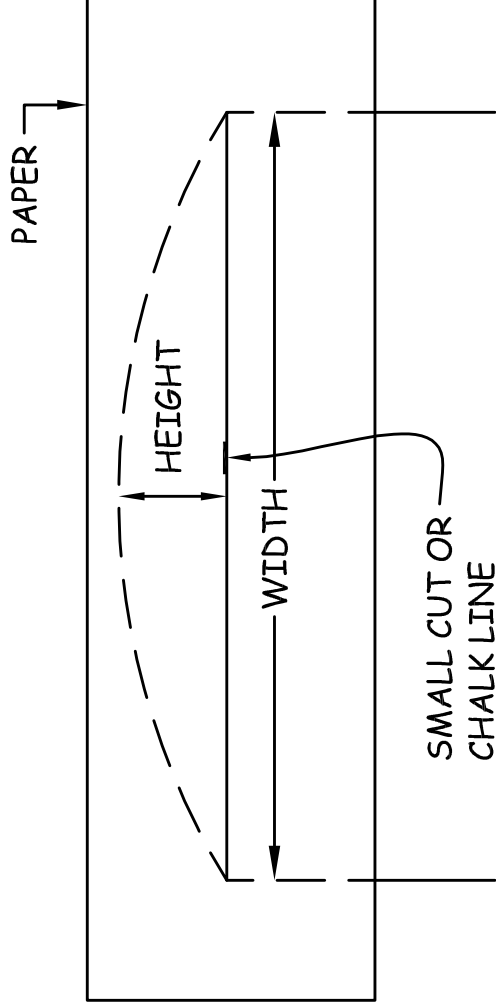

1. TACK THE PAPER TO THE JAMB. MAKE SURE THE PAPER IS TIGHT ACROSS THE WINDOW OPENING.
2. SNAP A CHALK LINE ACROSS BOTTOM OF WINDOW JAMB OR MAKE SMALL BOTTOM CUT.
3. CUT PAPER IN SLOTTED FASHION, USING LONG BLADE KNIFE AND HOLD TIGHT TO JAMB. DO NOT CUT AWAY TOTALLY. CUT IN "SLOTTED FASHION", 6" LONG CUTS, 1" SPACE. CUT TO INSIDE OF JAMB, WHEREVER POSSIBLE. **IF CUT MUST BE MADE TO OUTSIDE OF JAMB, BE SURE TO INDICATE THIS AND NOTE THE JAMB THICKNESS. WE WILL ADD FOR 1/4" CASING REVEAL.**
4. MEASURE WIDTH ACROSS BOTTOM AND WRITE IT ON TEMPLATE. MEASURE HEIGHT AND WRITE IT ON TEMPLATE. CHECK THESE DIMENSIONS TO THE CUTS. **PLEASE NOTE: WRITE ON THE FRONT OF THE PAPER.**

NOTE: THE DIMENSIONS ARE VERY IMPORTANT AS THE PAPER CAN STRETCH OR SHRINK WITH CHANGES IN HUMIDITY. THE DIMENSIONS ALLOW US TO CROSS-CHECK THE TEMPLATE SIZE.